

EAAC475 / EAAC475W

Electrohome

USER MANUAL

USB Charging Alarm Clock Radio with Time Projection



Thank you for your purchase of this Electrohome product. Please read this instruction manual carefully before using product to ensure proper use. Keep this manual in a safe place for future reference.

www.electrohome.com

Electrohome



NEED HELP?

**DO NOT RETURN THIS
PRODUCT TO THE STORE**

Please contact an ELECTROHOME® customer support representative first regarding any additional information on product features, specifications or assistance with setup.

Please contact us via one of the methods below:



Support:

www.electrohome.com/support

Online live web chat:

www.electrohome.com

For more product information visit **www.electrohome.com**

WARNINGS

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



ATTENTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICABLE PARTS INSIDE, REFER TO QUALIFIED USER PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

TO PREVENT ELECTRIC SHOCK; DO NOT USE THIS PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURES. TO PREVENT FIRE OR SHOCK HAZARD; DO NOT INSTALL THIS PRODUCT IN A CONFINED SPACE SUCH AS A BOOK CASE OR SIMILAR UNIT.

CAUTION: RETAIN THIS MANUAL FOR FUTURE REFERENCE

1. Read these instructions.
2. Keep these instructions.
3. Read all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. **WARNING:** Please refer to the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.

IMPORTANT SAFETY INFORMATION

7. Clean only with a dry cloth.
8. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing, and that not objects filled with liquids, such as vases, shall be placed on the apparatus.
16. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
17. The MAINS plug is used as the disconnect device, which shall remain readily operable.
18. The MAINS plug of apparatus should not be obstructed and should be easily accessed during intended use.
19. The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
20. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
21. There should be a minimum distance of 5 cm around the apparatus for sufficient ventilation.
22. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
23. No naked flame sources such as lighted candles should be placed on the apparatus.
24. Please use the apparatus in moderate climates.
25. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

IMPORTANT SAFETY INFORMATION

26. Unwind and straighten the power cord before use.

27. **Damage Requiring Service**

Unplug the power cord and refer servicing to qualified service professional under the following conditions:

- A. If liquid has been spilled on or into the product.
- B. If the product has been exposed to rain, water, or other liquids.
- C. If the product does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- D. If the product has been dropped or damaged in any way.
- E. When the product exhibits a distinct change in performance. This may indicate a need for service.

28. **Servicing**

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltages or other hazards. Refer all servicing to a qualified service professional.

29. **Replacement Parts**

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer, or have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

30. **Safety Check**

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

FCC statement on regulation

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT SAFETY INFORMATION

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

This class[B] digital apparatus complies with Canadian ICES-003.



This marking indicates that this product should not be disposed with other household wastes throughout North America. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

TABLE OF CONTENTS

 
Need Help?	2
Warnings	3
Important Safety Information	4
What's Included	8
Product Information	8
Operating Instructions	12
Connecting Power	12
Battery Backup	12
Installing the battery	13
Daylight Saving Time (DST) / Summer Time	13
Setting the Date & Time	14
Setting Alarm 1 & Alarm 2	15
Alarm Duration	17
Snooze Function	17
Sleep Timer	17
Nap Timer	17
Cycle Display	18
Adjusting LED Brightness	18
Listening to the Radio	18
To Set / Recall the Radio Presets	18
USB Charging Function	19
Projection Unit	19
Troubleshooting	20
Care and Maintenance	20
Specifications	21
Electrohome Warranty	22
Notes	23

 


WHAT'S INCLUDED

- USB Charging Alarm Clock Radio
- Quick Start Guide
- Instructional Manual
- 1 x 3V, CR2032 Flat Lithium battery

PRODUCT INFORMATION

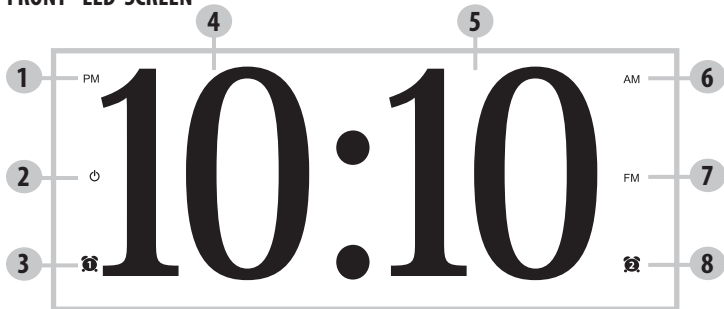



FRONT - LED SCREEN




1	LED dot appears to the right of PM indicating time is set to PM
2	LED dot appears to the right of  to indicate LED Time Display is set to OFF
3	Alarm 1 - LED dot appears to the right of  when Alarm 1 is set
4	Displays the hour
5	Displays the minutes
6	LED dot appears to the left of AM indicating AM Band is selected
7	LED dot appears to the left of FM indicating FM Band is selected
8	Alarm 2 - LED dot appears to the left of  when Alarm 2 is set

PRODUCT INFORMATION

FRONT BUTTONS

	When set to ON, LED screen shows TIME, YEAR, MONTH/DAY & current temperature
	Increases volume
	Turns POWER ON/OFF
	Decreases volume

 
REAR PANEL

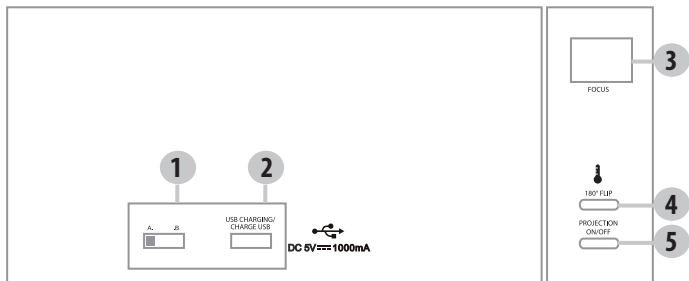

1	A. B. USB Circuit Switch
2	Charges USB devices
3	Allows you to adjust the focus of the projection unit
4	Press once to flip the projected time /temp. 180° ; press and hold to project temperature
5	Turn the projected time ON/OFF


PRODUCT INFORMATION

 TOP BUTTONS

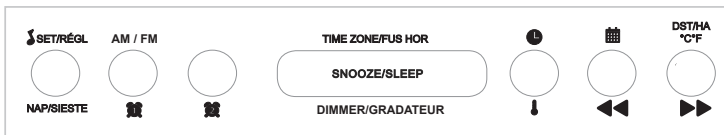

SET/RÉGL NAP/SIESTE	Set Radio Presets / Nap function
AM / FM	Toggle between AM & FM Radio band / Set ALARM 1
	Set ALARM 2
TIME ZONE/ SNOOZE/SLEEP DIMMER	Set TIME ZONE / SNOOZE / SLEEP / LED Brightness
	Set TIME / Y-M-D / 24h-12h Clock ; View Temperature
	View D-M-Y / Tune-Scan Radio (BACK)
DST/HA °C°F	Set DST / Tune-Scan RADIO (FORWARD) / Select °C OR °F

 BOTTOM

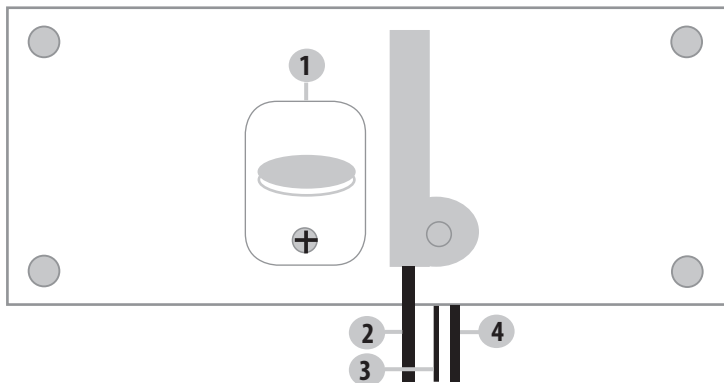

1	Battery compartment for 1 x 3V, CR2032 Flat Lithium battery
2	AC Adaptor
3	FM Antenna
4	Indoor Temperature Sensor

OPERATING INSTRUCTIONS





CONNECTING POWER

The USB Charging Alarm Clock Radio is equipped with an "AUTO TIME SET" feature. When power is connected, the clock display will flash '2' which is TIME ZONE 2 (Eastern time) and the default TIME ZONE setting. The correct time will be displayed, unless you are in another time zone.





To select TIME ZONE 2 (Eastern time) as your default time zone:

- Press  ONCE to confirm your selection.

To change your time zone upon setup:

- Press   /  **DST/°C °F** until your own time zone appears on the display; press  ONCE to confirm your selection.

To change your time zone after setup:

- Press and hold the **TIME ZONE/SNOOZE/SLEEP/DIMMER** button until numbers flash.
- Press   /  **DST/°C °F** until your own time zone appears on the display; press  ONCE to confirm your selection.

There are 8 programmed times zones:

Zone 0 - Newfoundland time

Zone 3 - Central time

Zone 6 - Yukon time

Zone 1 - Atlantic time

Zone 4 - Mountain time

Zone 7 - Hawaiian time

Zone 2 - Eastern time (default)

Zone 5 - Pacific time

BATTERY BACKUP

This alarm clock is equipped with a battery backup feature. This feature will restore your alarm clock settings in the event of a power outage. The 3V, CR2032 Flat Lithium battery is pre-installed at the factory, however, should you need to replace the battery, please read the following instructions.

OPERATING INSTRUCTIONS

INSTALLING THE BATTERY

1. Using a small Phillips Head screwdriver, remove the screw from the battery panel on the bottom of the unit.
2. Remove the battery compartment panel.
3. Remove/properly dispose of depleted battery and replace with new, 3V, CR2032 Flat Lithium battery.
4. Close the battery compartment and put screw into place to secure battery panel.

- **Batteries must be installed by an adult.**
- **Use only the recommended size and type of battery specified.**
- **Please be sure to follow the correct polarity when installing the battery in the battery compartment. A reversed battery may cause damage to the alarm clock.**
- **When not using the unit for a prolonged period of time, please remove the batteries to avoid possible damage caused by leaking batteries.**

ATTENTION

- When replacing the battery, do not disconnect AC plug from AC outlet. Current time and alarm will be initialized.
- Do not plug or unplug the power cable if you have wet hands.
- If you are not planning to use the unit for an extended period of time, disconnect the power cable from the wall outlet.
- **Do not pull on the cord!** You may damage the power cord and may cause an electric shock when disconnecting the power cord from the wall outlet. Pull firmly at the base of the plug.

DAYLIGHT SAVING TIME (DST) / SUMMER TIME

Daylight Saving Time/Summer Time is automatically preset.

- Daylight saving time begins at: 2:00 AM on the second Sunday of March.
- Standard time begins at: 2:00 AM on the first Sunday of November.

Cancelling / reactivating Automatic DST/Summer Time

1. To CANCEL DST/Summer Time, press and hold the ►► **DST/°C °F** button for 3 seconds while the radio is OFF.
2. 'OFF' will appear in the display to show that the Automatic DST/Summer Time adjustment is cancelled. The display will return to the clock.

OPERATING INSTRUCTIONS

3. To REACTIVATE DST/Summer Time, press and hold the **▶▶ DST/°C °F** button for 3 seconds while the radio is OFF.
4. 'ON' will appear in the display to show that the Automatic DST/Summer Time adjustment is reactivated. The display will return to the clock.

- The timing of Automatic DST/Summer Time employed by the unit (see above) is subjected to variations by region and the law in each country/region. In such a case, cancel the Automatic DST/Summer Time adjustment.
- If you live in a country/region that has not introduced Daylight Saving Time/ Summer Time, you must cancel Automatic DST/Summer Time adjustment before using the unit.

SETTING THE DATE & TIME

To change the Date/Time, press and hold the **! L** button. The settings below will appear in the following order:



Year > Month > Day > 12/24 H > Hour > Min

1. Press the **◀◀ [Calendar Icon]** button to DECREASE numbers or to toggle through settings.
2. Press the **▶▶ DST/°C °F** button to INCREASE numbers or to toggle through the different settings.
3. To confirm your selection, press the **! L** button once again.









- LED dot appears to the right of PM indicating time is set to PM; no dot for AM.
- **Pressing the **◀◀ [Calendar Icon]** or the **▶▶ DST/°C °F** buttons once**, decreases/increases one number at a time.
- **Pressing and holding the **◀◀ [Calendar Icon]** / **▶▶ DST/°C °F** buttons** quickly decreases/ increases the numbers.

OPERATING INSTRUCTIONS

SETTING ALARM 1 & ALARM 2

To set ALARM 1, press the  button once to view current alarm setting then press and hold the  button and alarm time will flash. The settings below will appear in the following order:

AL 1 Hour > AL 1 Min > AL 1 Alarm Modes > AL 1 Radio Station > AL 1 Radio Volume

1. Press the   /  **DST/°C °F** buttons to decrease/increase the HOUR; press the  button to confirm HOUR. The MINUTES will begin to flash.
2. Press the   /  **DST/°C °F** buttons to decrease/increase the MINUTES; press the  button to confirm MINUTES. ALARM MODES will flash.

ALARM MODES allows you to set more than one alarm in a week i.e. ALARM 1 set to wake you Monday-Friday and ALARM 2 set to wake you on weekends. The ALARM MODE settings are as follows:













1-5 : Monday to Friday

6-7 : Saturday & Sunday



1-7 : Whole week

1-1 : One day of week






NOTE: When selecting 1-1, you must select a specific day as follows: **1=Monday, 2=Tuesday, 3=Wednesday, 4=Thursday, 5=Friday, 6=Saturday, 7=Sunday**

3. Press the   /  **DST/°C °F** buttons to toggle between the ALARM MODE settings then press the  button to confirm your selection; if 1-1 is selected, press the   /  **DST/°C °F** buttons to toggle between the days of the week and press the  button to confirm your selection. The Wake options will begin to flash.
4. Press the   /  **DST/°C °F** buttons to toggle between the Wake options AM, FM or bu (buzzer); press the  button to confirm your selection. The Alarm Volume selection will begin to flash.
5. Press the   /  **DST/°C °F** buttons to decrease/increase the Alarm Volume; press the  button to confirm your selection.

OPERATING INSTRUCTIONS

To set ALARM 2, press the  button once to view current alarm setting then press and hold the  button and alarm time will flash. The settings below will appear in the following order:

AL 2 Hour > AL 2 Min > AL 2 Alarm Modes > AL 2 Radio Station > AL 2 Radio Volume

1. Press the   /  **DST/°C °F** buttons to decrease/increase the HOUR; press  to confirm the HOUR. The MINUTES will begin to flash.
2. Press the   /  **DST/°C °F** buttons to decrease/increase the MINUTES; press  to confirm the MINUTES. ALARM MODES will begin to flash.

The ALARM MODE settings are as follows:

















1-5 : Monday to Friday



6-7 : Saturday & Sunday

1-7 : Whole week

1-1 : One day of week

NOTE: When selecting 1-1, you must select a specific day as follows: **1=Monday, 2=Tuesday, 3=Wednesday, 4=Thursday, 5=Friday, 6=Saturday, 7=Sunday**

3. Press the   /  **DST/°C °F** buttons to toggle between the ALARM MODE settings; press the  button to confirm your selection; if 1-1 is selected, press the   /  **DST/°C °F** buttons to toggle between the days of the week and press the  button to confirm your selection. The Wake options will begin to flash.
4. Press the   /  **DST/°C °F** buttons to toggle between the Wake options AM, FM or bu (buzzer); press the  button to confirm your selection. The Alarm Volume selection will begin to flash.
5. Press the   /  **DST/°C °F** buttons to decrease/increase the Alarm Volume; press the  button to confirm your selection.

To **deactivate** ALARM 1 and/or ALARM 2, press and hold the  button and/or the  button until the LED is no longer visible on the front LED panel.


OPERATING INSTRUCTIONS

ALARM DURATION

The BUZZER alarm or RADIO alarm will sound for 30 minutes if no key is pressed, then it will stop automatically and resume to the same alarm time on next scheduled day. To stop ALARM 1 and/or ALARM 2 when sounding, press the POWER ON/OFF  button on the front of the unit.



SNOOZE FUNCTION

When alarm is sounding, press the **SNOOZE/SLEEP** button to stop alarm for 9 minutes. Alarm will resume after 9 minutes.

- Pressing the POWER ON/OFF  button on the front of the unit will CANCEL the Snooze function;
- Snooze function will also stop automatically after 30 minutes.


SLEEP TIMER

The sleep timer allows you to listen to music for a preset amount of time ranging from 90 minutes to 10 minutes. It is commonly used by people who prefer to fall asleep to music.

1. Press the POWER ON/OFF  button to turn the radio 'ON'.
2. Press the **SNOOZE/SLEEP/DIM** button to toggle through the preset times; 90min > 60min > 30min > 15min > OFF
3. To cancel the SLEEP timer, press the SNOOZE/SLEEP/DIM button until you see OFF in the display or press and hold the POWER ON/OFF  button.

NAP TIMER


The nap timer allows you to set a buzzer alarm to go off after a preset amount of time ranging from 90 minutes to 10 minutes.

4. With radio off, press the **NAP/SIESTE** button to turn on NAP timer.
5. Press the **NAP/SIESTE** button to toggle through the preset times; 90min > 80min > 70min > 60min > 50min > 40min > 30min > 20min > 10min > OFF
6. When enabled, pressing the **NAP/SIESTE** button will show current NAP timer and pressing again will reset timer to 90 minutes
7. When the NAP timer expires, it will continue to buzz for 30 minutes or it can be stopped by pressing the POWER ON/OFF  button.
8. To cancel the NAP timer, press the **NAP/SIESTE** button until you see OFF

OPERATING INSTRUCTIONS

CYCLE DISPLAY










The CYCLE DISPLAY  function displays the TIME, YEAR, MONTH/DAY & CURRENT TEMPERATURE on the front LED panel in sequence.

1. Press and hold the display  button on the front of the alarm clock until 'ON' appears on the LED panel. Please wait 10 seconds for the cycle to begin.
2. To return to TIME display only, press and hold until 'OFF' appears on the LED panel.

ADJUSTING LED BRIGHTNESS










You can adjust the brightness of the LED display making it brighter, dimmer or even turning it OFF when the radio is OFF. There are four dimming options available: HIGH/MEDIUM/LOW/OFF (Standby). Press the DIMMER/GRADATEUR button to toggle between the four brightness settings.

LISTENING TO THE RADIO




1. Press the POWER ON/OFF  button on the front panel to turn the radio 'ON'.
2. Press the **AM / FM**  button to toggle between AM and FM radio bands.
3. Press the   /  **DST/°C °F** buttons once, to move back/move forward one station at a time.
4. Press and hold the   /  **DST/°C °F** buttons for one second to scan back/forward through the stations; the unit will automatically scan to the next broadcasting station.
5. Press and hold the POWER ON/OFF  button on the front panel to turn the radio 'OFF'.

Please ensure that the FM antenna is completely unrolled and extended for best FM reception. The AM band uses an internal directional aerial. For best reception, please rotate the radio.

TO SET / RECALL THE RADIO PRESETS

1. Press the POWER ON/OFF  button on the front panel to turn the radio 'ON'.
2. When the radio is 'ON', press the  **AM / FM** button to toggle between AM and FM radio bands.
3. Use the   /  **DST/°C °F** buttons to select the desired radio station.
4. Press the  **SET/NAP** button; 'P02' will blink in the display.
5. Use the   /  **DST/°C °F** buttons to toggle to the desired preset 'P01-P10' number.

OPERATING INSTRUCTIONS


6. Press the  SET/NAP button again to set the preset.
7. Repeat steps 2 through 4 to set more presets.
8. To recall a preset station, press the  SET/NAP button once to view current preset; press the  SET/NAP again until desired preset station appears on the LED panel.

The unit supports up to 10 AM & 10 FM preset stations.

USB Charging Function



This alarm clock is equipped with a convenient USB charging port on the back panel that allows you to recharge many brands of smartphones, tablets and portable music players that come with USB charging cables. To charge your device, connect the USB charging cable that is connected to your handheld device to the USB charging port on the back panel of this alarm clock.

IMPORTANT!

When connecting your USB cable to the USB port on this alarm clock please be sure that the USB symbol  on your plug is facing UP when you insert the plug into the USB port. Observe the charging indicator on your device to confirm that it is charging. If your device is not charging when the USB selector switch is in the 'A' position, slide the selector switch to the 'B' position to begin charging. To improve charging effectiveness, please turn off and/or refrain from using your device while charging.




**Charging time will vary depending on the charging current that your device requires.
Therefore, some devices will take longer to charge than others.**

PROJECTION UNIT

The Projection Unit will project the Time or the Temperature on a wall or ceiling of a darkened room (Max. distance is 3-9 feet). To display the temperature, press and hold the  180° flip button. You can flip the projected image 180° by pressing the  180° flip button ONCE (time or temperature). To turn the projected image OFF, press the projection on/off button. Turn the Focus Adjustment Wheel until the projected time/temperature is clearly shown on the ceiling or wall.

TROUBLESHOOTING

Please consult the Troubleshooting chart below before communicating with ELECTROHOME Customer Support.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
GENERAL		
Power does not come on	AC cord not plugged in	Insert plug firmly into AC outlet
RADIO		
No Sound	Power is not on	Press the POWER ON/OFF  button
	VOLUME control at minimum position	Turn the VOLUME control up
Noise or sound distorted on AM or FM	AM-interference from traffic	Tune the radio for better AM reception
	FM-antenna wire not extended	Extend antenna wire
SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
CLOCK		
Incorrect Time	Clock not set	Set the clock
	Battery is inserted incorrectly, or depleted	Check/replace the battery
Alarm does not turn on	Alarm is not set to turn on	Activate ALARM 1  or ALARM 2 
	Clock is not set	Set the clock
	Alarm time is not set	Set alarm time for ALARM 1 or ALARM 2
No display	Dimmer is set to Standby Mode	Press Dimmer button

CARE AND MAINTENANCE

1. Disconnect the unit from any power sources before cleaning.
2. Keep the unit away from magnetic objects, water or heat sources.
3. Clean only with a dry cloth.

SPECIFICATIONS

Display Size	1.2"
Display Colour	LED
Automatic Time Set	Yes
Battery Back-up for Time	Yes
PLL Digital Radio Tuner	Yes
Radio Station Pre-sets	Yes 10 AM / 10 FM
Dual Alarm	Yes
Calendar Display	Yes
Indoor Temperature Reading	Yes
Adjustable Brightness	Off, Low, Medium, High
Sleep Timer	Yes
Battery Required	Lithium, Included (3V CR2032)
USB Charging	Yes, 1000mA
Speaker Size	2.0" 0.5W, 8 Ohms
Volume Indicator LED	Yes- numerical display of volume value
Power Adapter Input	100-240V 50-60 Hz
Power Adapter Output	5V 1200mA
Frequency Range (AM)	520-1710 kHz
Frequency Range (FM)	87.5-107.9 MHz
Power Supply	AC 7.5V 1000mA
Projection Swivel Tilt	180°
Number of Alarms	2 - with optional weekend skip
Screen Size	4.0"
Alarm Options	Gradual Radio / Buzzer
Projection Time / Temperature	Yes
Projection Focus	Yes
Projection Flip	Yes

ELECTROHOME® WARRANTY

ELECTROHOME gives the following express warranty to the original consumer purchaser or gift recipient for this ELECTROHOME product, when shipped in its original container and sold or distributed by ELECTROHOME or by an Authorized ELECTROHOME Dealer: ELECTROHOME warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, ELECTROHOME shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

This warranty shall not apply to:

- A. Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- B. Any ELECTROHOME product tampered with, modified, adjusted or repaired by any party other than ELECTROHOME or ELECTROHOME's Authorized Service Centres.
- C. Damage caused or repairs required as a result of the use with items not specified or approved by ELECTROHOME, including but not limited to head cleaning tapes and chemical cleaning agents.
- D. Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, stylus, trays, filters, cables, paper, cabinet, cabinet parts, knobs, buttons, baskets, stands and shelves.
- E. Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- F. Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
- G. Any product received without appropriate model, serial number and CSA /cUL /cULus /cETL /cETLus markings.
- H. Any products used for rental or commercial purposes.
- I. Any installation, setup and/or programming charges.

Should this ELECTROHOME product fail to operate during the warranty period, warranty service may be obtained upon delivery of the ELECTROHOME product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized ELECTROHOME Service Centre. In-home warranty service may be provided at ELECTROHOME's discretion on any ELECTROHOME television with the screen size of 40" or larger. This warranty constitutes the entire express warranty granted by ELECTROHOME and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of ELECTROHOME. To the extent the law permits, ELECTROHOME disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this ELECTROHOME product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of ELECTROHOME Electronics to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

1 YEAR PARTS & LABOUR WARRANTY PERIODS - To obtain the name and address of the nearest Authorized ELECTROHOME Service Centre or for more information on this warranty

Contact ELECTROHOME Support :

- Support: www.electrohome.com/support
- Website: www.electrohome.com
- By mail: ELECTROHOME Customer Service, 4080 Montrose Road, Niagara Falls, ON L2H 1J9

NOTES